 
 


KIRISUN
D5
4G Body Worn
Camera Quick
Operation Manual

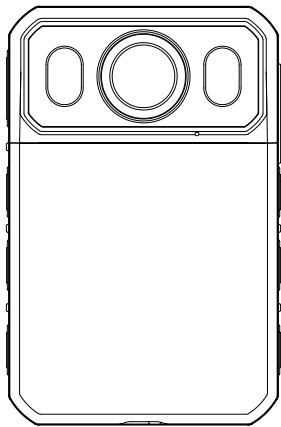

Version: V1.0

Product Overview

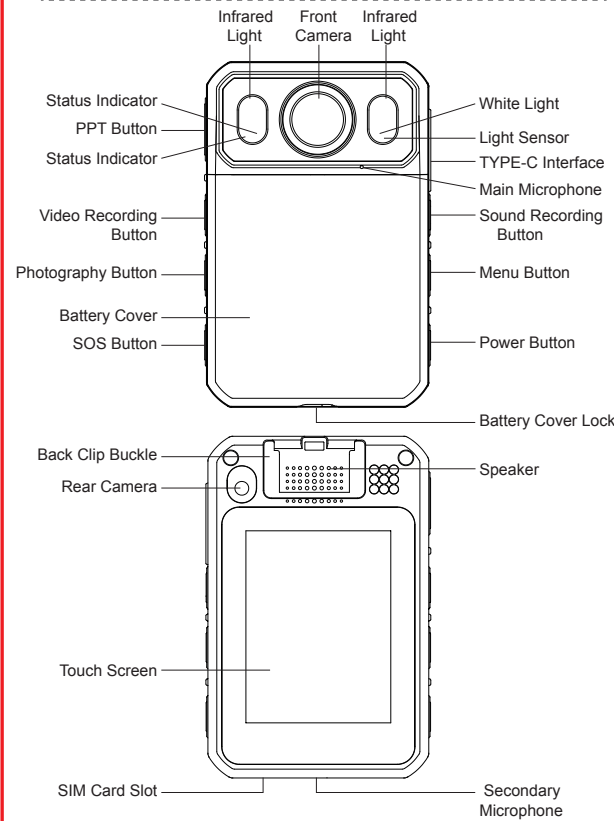

Packing List


Serial Number	Material Name	Quantity
1	Body Worn Camera	1Unit
2	Back Clip	1Unit
3	Power Adapter	1Unit
4	USB Cable	1Unit
5	User Manual	1Unit
6	Warranty Card	1Unit
7	Certificate of Conformity	1Unit
8	Packing Box	1Unit



National Service Hotline: 400-700-9995
Fujian Kirisun Communication Co., Ltd.


SIM Card Installation

 - When the device is off, open the rubber plug with the SIM mark at the bottom of the device and install the SIM card according to the direction indicated by the slot.
- When installing, face the chip side of the SIM card away from the screen end, with the notch facing outward until you hear a "click" sound, indicating successful installation.
- To remove the card, press down on the SIM card, and it will automatically pop out.

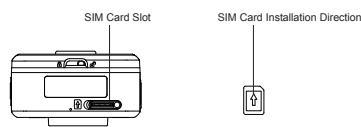


Battery Removal

 - First, move the battery cover lock to the unlock position, push the battery cover downward, and pull the battery handle to remove the battery cover.
- When installing the battery, place the battery into the compartment with the battery slot facing down, then press down on the upper end of the battery to secure it in place. Afterward, cover with the battery cover and move the lock back to the locking position.

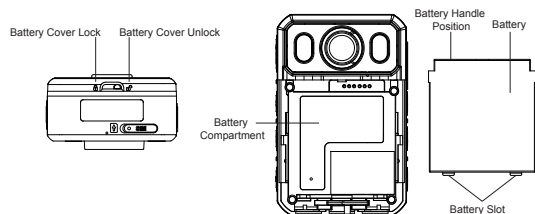


Back Clip Removal

 - When installing the back clip, align the clip position on the body worn camera with the installation slot on the back of the device and push it downward until you hear a "click" sound, indicating the back clip is securely in place.
- To remove the back clip of the body worn camera, press down on the clip buckle to detach it from the installation position on the device and then push upward to remove the back clip.

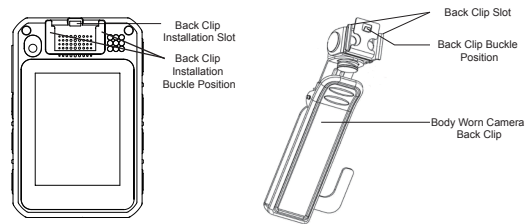

Charging the Body Worn Camera

 - Please charge the body worn camera using the standard charger and cable provided through the charging port. Do not use other non-standard chargers and cables to charge the body worn camera to avoid damage to the machine.
- When plugged in for charging, the charging indicator light will turn red, and the charging status will also display on the screen. When the device is off and fully charged, the red light will turn off, and the screen will show 100% battery. When the device is on and fully charged during charging, the green light will turn on, and the display screen will show full battery capacity.

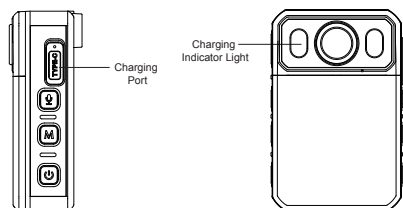

Botton and Interface Description

Botton Name	Icon	Button Mode	Description
Power On/Off Button		Short Press Long Press	When powered off: Long press to power on; When powered on: Long press for shutdown prompt; When the screen is off: Short press to wake up; When the screen is on: Short press to sleep;
Menu Button		Short Press	Short press: Return to the previous page Long press: Switch the white light on/off
Menu Button		Short Press Long Press	When not recording audio/video: short press to start recording; During recording: short press to stop recording; Long press: In manual infrared mode, long press to switch infrared on/off
PPT Button		Long Press	Public Network Group Intercom
Video Recording Button		Short Press Long Press	When not recording video: short press to start recording; When recording video: short press to stop recording; Pre-record: long press
Photography Button		Short Press Long Press	Short press: take a photo Long press: hold to switch resolution
SOS Button		Short Press Long Press	Long press: platform alarm (platform settings is required) Short press: during video and audio recording to mark/cancel highlight tagging
TYPE-C Interface		Connection and Removal	Data Transfer Interface, Charging Interface
SIM Interface		Insert and Remove	Inserting SIM Card

Basic Operations

1. Powering On and Off

- Power On: Long press the "Power Button" to enter the boot interface.
- Restart and Power Off: Long press the "Power Button" to show "Power Off" and "Restart" options, then proceed as needed.

Basic Operations

2. Recording Logs

- Start Recording: While powered on, press the "Video Recording Button" to start recording, a video recording status indicator will appear.
- Stop Recording: Press the "Video Recording Button" to stop, the recording status indicator will disappear or show a delayed ending status.
- Pre-record Video: Long press the video recording button to pre-record, an icon appears, long press again to stop pre-recording.
- Important File Tagging: Press the "SOS" button to prompt "Activate Highlight Tagging" for the current recording file. If already tagged, press the "SOS" button to prompt "Cancel Highlight Tagging" and cancel the marking of the current recording file. After recording, the "Highlight Tagged" videos will appear in the top right corner of the video preview list.

② Audio Recording

- Start Recording: Press the "Recording Button" to start audio recording, a recording indicator will display.
- Stop Recording: If recording, press the "Recording Button" to stop, the recording indicator will disappear.
- Taking PhotosShort press the "Photography Button" to take a photo.
- File Playback
Videos, audio recordings, and photos can be viewed via "File Playback".

3. Settings

- Network Settings
With support of WIFI settings and mobile network (cellular network) settings
- Audio and Video Settings
You can view and set: Video resolution, photo resolution, video encoding, video frame rate, recording quality, streaming quality, video segmentation, pre-recording video, delayed recording, loop recording, photo mode, night vision mode, GPS recording, fall and impact recording, video stabilization, motion detection recording, Bluetooth control, boot recording, default screen brightness in preview mode.
- Device Settings
You can view and set: Bluetooth, volume settings, time settings, regional language settings, screen sleep settings, screen brightness, voice announcements, time announcements, vibration alerts, power-saving mode.
- About
You can view: device ID, officer ID, officer name, device model, application version, system version, check for updates, etc.